UNIVERSIDAD JUÁREZ DEL ESTADO DE DURANGO

DIRECCIÓN DE TELECOMUNICACIONES E INFORMÁTICA

DEPARTAMENTO DE DESARROLLO DE SISTEMAS



MANUAL DE INSTALACIÓN IMPRESORA TM-U220D

Índice

1Ajustar la cinta	2
2Colocar la cinta.	3
3Colocar el rollo de impresión	4
4Instalación de la impresora	5

1.-Ajustar la cinta.

La cinta ya viene desajustada en el paquete de la impresora, así como se muestra en la siguiente imagen:



Para ajustarla solo basta con darle vuelta al engrane que se sitúa en la parte de la derecha y de quedar como en la siguiente imagen:



2.-Colocar la cinta.

Para colocar la cinta abra la cubierta de enfrente de la impresora como se muestra a continuación:



Inserte la cinta como se muestra en la siguiente imagen y presione levemente hasta que la cinta quede insertada en la impresora.



Ahora cierre la cubierta de enfrente.



3.-Colocar el rollo de impresión.

Abra la cubierta de la parte de atrás y coloque el rollo de impresión como se muestra a continuación:



Cierre la cubierta de atrás como se muestra:



4.-Instalación de la impresora

Una vez que la impresora ya esta conectada a la corriente eléctrica y también esta conectada a la computadora mediante un cable usb asegúrese en panel de control de que la computadora esta reconociendo la impresora como se muestra a continuación:



Una vez que ya se ha asegurado que la computadora reconoce la impresora Inserte el cd de instalación que viene con la impresora.



Se abrirá una página web llamada Manuals en donde iremos a la sección que se muestra a continuación para descargar el controlador, y seleccionamos el que está marcado en color rojo:

I	Enlaces de descarga		
	Titulo	Soporte	Versión
	EPSON Advanced Printer Driver English Version	Windows 10, Windows 8.1, Windows 8, Windows 7, Windows Vista, Windows XP, Windows Server 2012, Windows Server 2008, Windows Server 2003, Windows Embedded	Última versión
(EPSON Advanced Printer Driver Simplified Chinese Version	Windows 10, Windows 8.1, Windows 8, Windows 7, Windows Vista, Windows XP, Windows Server 2012, Windows Server 2008, Windows Server 2003, Windows Emboddod	Última versión

Una vez que le damos click al enlace este nos llevara a la pagina web del proveedor de la impresora donde está el controlador nos posicionamos en la parte de abajo y aceptamos los términos de privacidad para que se habilite el botón de descarga como se muestra en la siguiente imagen:

✓ Accept
Download
EPSON Advanced Printer Driver Ver.4.56dE File Name: APD_456dEWM.zip File size: 87,698KB

Damos click en el botón Download y esperamos a que se descargue el controlador, Una vez que ya se descargó guárdelo en la ubicación de su preferencia, en la siguiente imagen el archivo descargado se encuentra marcado de color rojo, extraiga su contenido con la herramienta win rar, hacemos click derecho y seleccionamos la opción Extraer aquí.

📕 🛃 📕 🔻 Driver Imp	presora		-	- 🗆	×
Archivo Inicio Compa	rtir Vista				~ ?
← → × ↑ 📕 > D	river Impresora	~	U Buscar en Driver	Impresora	R
Acceso rápido	Nombre	Fecha de modifica	Тіро	Tamaño	
Escritorio	APD_456dEWM	12/01/2018 01:31	Archivo WinRAR ZIP	87,699 KB	
	APD4_Install_E_RevU	25/11/2013 04:55	Adobe Acrobat D	5,008 KB	
Descargas 🖈	APD4_READMEUS	31/07/2017 05:56	Documento de tex	30 KB	
🔮 Documentos 🖈		13/05/2016 05:56	Aplicación	34,244 KB	
🔚 Imágenes 🛛 🖈	APD_456dE	31/07/2017 05:56	Aplicación	50,701 KB	

Ya que se realizó esta acción observe que el ejecutable del controlador está marcado en color verde este ejecutable debe ejecutarse en modo de administrador como se muestra a continuación:

📜 🗹 📜 =	Herr	ramientas de aplicación	Driver Impresora		_	-	\times
Archivo Inicio Compart	ir Vista	A h					~ ?
	ver Impresora	Abrir			ar on Drivor	Improsora	0
	verimpresora	y Ejecutar como a	administrador			Impresora	~
^	Nombre	Solucionar prob	olemas de compatibilidad			Tamaño	
📌 Acceso rápido		Anclar a Inicio				07.000 VD	
Escritorio 🖈	APD_456dE	Verificar con 36	0 Total Security		WINRAR ZIP	87,699 KB	
	📜 APD4_Instal				crobat D	5,008 KB	
📕 Descargas 🚿	APD4_READ	Ejecutar en 360	Sandbox		nto de tex	30 KB	
🗎 Documentos 🖈	😽 APDMANE_	📀 Forzar eliminaci	ión con 360 Total Security		ón	34,244 KB	
🔚 Imágenes 🛛 🖈	🌄 APD_456dE	Compartir con		>	5n	50,701 KB	

Cuando aparezca la pantalla del instalador siga los siguientes pasos que se muestran a continuación:

PSON Advanced Printer Driver 4	- InstallShield Wizard	×
0123486769	Welcome to the InstallShield Wizard for EPSON Advanced Printer Driver 4	
455787 59787 59797 59797 59797 59797	This program will install EPSON Advanced Printer Driver 4 on your computer. We recommend closing all Windows applications before running this setup program.	
789:1 455789 789:11 55789	[Warning]	
100 000 000 L	When using this product with any of the following programs on the same PC, use the versions listed below. When using printer sharing, be sure to check the version installed on the client PC before use.	
And the second	EPSON Advanced Printer Driver 5 EPSON OPOS ADK Ver. 2.68E or later EPSON OPOS ADK for .NET Ver. 1.11.20 or later EPSON JavaPOS ADK Ver. 1.11.20 or later	
- A.A ABA2	< Back Next > Cancel	-
PSON Advanced Printer Driver 4	- InstallShield Wizard	×
PSON Advanced Printer Driver 4 License Agreement Please read the following license	e agreement carefully.	×
PSON Advanced Printer Driver 4 License Agreement Please read the following license SEIKO EPSON CORPORATION SOFTWARE LICENSE AGREE	- InstallShield Wizard e agreement carefully.	×
PSON Advanced Printer Driver 4 License Agreement Please read the following license SEIKO EPSON CORPORATION SOFTWARE LICENSE AGREE IMPORTANT! READ THIS SOF computer software product, fonl explanatory written materials (the Licensee ("you") on the conditio ("EPSON") to the terms and con the Software, you are represent Agreement. You should read the Software. If you do not agree we permitted to install or use the Software.	A - InstallShield Wizard a agreement carefully. N MENT FTWARE LICENSE AGREEMENT CAREFULLY. The tware, typefaces and/or data, including any accompanying e "Software") should only be installed or used by the on you agree with SEIKO EPSON CORPORATION nditions set forth in this Agreement. By installing or using ing to agree all the terms and conditions set forth in this is Agreement carefully before installing or using the with the terms and conditions of this Agreement, you are not oftware.	×
PSON Advanced Printer Driver 4 License Agreement Please read the following license SEIKO EPSON CORPORATION SOFTWARE LICENSE AGREE IMPORTANT! READ THIS SOF computer software product, fonl explanatory written materials (the Licensee ("you") on the condition ("EPSON") to the terms and con the Software, you are represent Agreement. You should read the Software. If you do not agree w permitted to install or use the Software.	A - InstallShield Wizard a agreement carefully. N MENT FTWARE LICENSE AGREEMENT CAREFULLY. The tware, typefaces and/or data, including any accompanying e "Software") should only be installed or used by the on you agree with SEIKO EPSON CORPORATION notions set forth in this Agreement. By installing or using ing to agree all the terms and conditions set forth in this is Agreement carefully before installing or using the with the terms and conditions of this Agreement, you are not oftware.	×
PSON Advanced Printer Driver 4 License Agreement Please read the following license SEIKO EPSON CORPORATION SOFTWARE LICENSE AGREE IMPORTANT! READ THIS SOF computer software product, fon explanatory written materials (the Licensee ("you") on the conditio ("EPSON") to the terms and con the Software, you are represent Agreement. You should read th Software. If you do not agree w permitted to install or use the Software. I accept the terms of the licen I do not accept the terms of the	A - InstallShield Wizard a agreement carefully. M MENT FTWARE LICENSE AGREEMENT CAREFULLY. The tware, typefaces and/or data, including any accompanying e "Software") should only be installed or used by the on you agree with SEIKO EPSON CORPORATION nditions set forth in this Agreement. By installing or using ing to agree all the terms and conditions of this Agreement, you are not oftware. mse agreement the license agreement	
PSON Advanced Printer Driver 4 License Agreement Please read the following license SEIKO EPSON CORPORATION SOFTWARE LICENSE AGREE IMPORTANT! READ THIS SOF computer software product, fonl explanatory written materials (the Licensee ("you") on the conditio ("EPSON") to the terms and con the Software, you are represent Agreement. You should read the Software. If you do not agree w permitted to install or use the Software. I accept the terms of the licen I do not accept the terms of the stallShield	A - InstallShield Wizard a greement carefully. M MENT FTWARE LICENSE AGREEMENT CAREFULLY. The tware, typefaces and/or data, including any accompanying e "Software") should only be installed or used by the on you agree with SEIKO EPSON CORPORATION nditions set forth in this Agreement. By installing or using ing to agree all the terms and conditions set forth in this is Agreement carefully before installing or using the with the terms and conditions of this Agreement, you are not oftware. v	

EPSON Advanced Printer Driver 4 - InstallShield Wizard	×
Setup Type Select the setup type to install.	4
Click the type of setup you prefer, then click Next.	
 Minimum (Recommended) Installs the minimum required features. 	
Standard Installs all program features.	
Choose which program features to install. Recommende	d for advanced users.
<pre>Constantshield</pre>	> Cancel
EPSON Advanced Printer Driver 4 - InstallShield Wizard	×
Printer Configuration Change the printer settings.	4
Select a printer to configure. If the desired printer is not in the list, please a	add the printer.
	Add Edit Delete Copy
Enable Plug & Play installation for all printer models.	~
InstallShield	
< Back Next	> Cancel

EPSON Advanced Printer Drive	r 4 - InstallShield Wizard		×
Add Printer			1
Settings for the printer being a	added		<u>/-</u>
Specify the printer to be adde	d.		
Select driver:			\sim
Printer name:	EPSON TM-P60IIPeeler Label EPSON TM-P60IIPeeler Receip EPSON TM-P60Peeler Label EPSON TM-P60Peeler Receipt	ot	^
Port Type:	EPSUN TM-120 Receipt EPSUN TM-T20-42C Receipt EPSUN TM-T58 Receipt EPSUN TM-T70 Receipt		
Set as Default Print	EPSON TM-T86FII Receipt		
Note: Steps for connecting a 1. Add the device by connec 2. Add the other device. Sele	EPSON TM-1881V Receipt EPSON TM-1881V Receipt EPSON TM-188V Receipt EPSON TM-188V Receipt		
InstallShield	EPSON TM-U120 Possipt		
	EPSON TM-01201 Receipt EPSON TM-0220 Receipt EPSON TM-0230 Receipt EPSON TM-0295 Slip		
	EPSON TM-U325 Heceipt EPSON TM-U325 Validation EPSON TM-U375 Receipt EPSON TM-U375 Slip EPSON TM-U375 Validation EPSON TM-U375 Validation EPSON TM-U590 Slip EPSON TM-U675 Slip EPSON TM-U675 Validation		
EPSON Advanced Printer Drive	r 4 - InstallShield Wizard		Х
Add Printer			
Settings for the printer being a	added		4
Specify the printer to be adde	d.		
Select driver:	EPSON TM-U220 Receipt		~
Printer name:	EPSON TM-U220 Receipt		
Port Type:	Create a Parallel port		~
Set as Default Print	Create a Parallel port Create a Serial port Create an Ethernet port		
Note: Steps for connecting a 1. Add the device by connect 2. Add the other device. Sele	Create a USB port ing it to the PC directly. ct the device to be connected in	- "Communication	
InstallShield			
	< Back	Next >	Cancel

	river 4 - InstallShield Wizard	×
Add Printer Settings for the printer be	ing added	1.
Specify the printer to be a	added.	
Select driver:	EPSON TM-U220 Receipt	~
Printer name:	EPSON TM-U220 Receipt	
Port Type:	Create a USB port	~
Set as Default I	Printer	
Note: Steps for connectir 1. Add the device by con 2. Add the other device.	ng a customer display to the printer necting it to the PC directly. Select the device to be connected in '	'Communication''.
InstallShield		
	< Back	Next > Cancel
EPSON Advanced Printer D	oriver 4 - InstallShield Wizard	×
Change the printer setting	gs.	1.
Printer Configuration Change the printer setting Select a printer to configu	gs. ure. If the desired printer is not in the lis	t, please add the printer.
Printer Configuration Change the printer setting Select a printer to configu EPSON TM-U220 Rece	gs. ure. If the desired printer is not in the lis ipt	t, please add the printer.
Printer Configuration Change the printer setting Select a printer to configu EPSON TM-U220 Rece	gs. ure. If the desired printer is not in the lis ipt	t, please add the printer.
Printer Configuration Change the printer setting Select a printer to configu EPSON TM-U220 Rece	gs. ure. If the desired printer is not in the lis ipt	t, please add the printer.
Printer Configuration Change the printer setting Select a printer to configu EPSON TM-U220 Rece	gs. ure. If the desired printer is not in the lis	t, please add the printer.
Printer Configuration Change the printer setting Select a printer to configu EPSON TM-U220 Rece	gs. ure. If the desired printer is not in the lis	t, please add the printer.
Printer Configuration Change the printer setting Select a printer to configu EPSON TM-U220 Rece	gs. ure. If the desired printer is not in the lis	t, please add the printer.
Printer Configuration Change the printer setting Select a printer to configu EPSON TM-U220 Rece	gs. ure. If the desired printer is not in the lis ipt stallation for all printer models.	t, please add the printer.
Printer Configuration Change the printer setting Select a printer to configu EPSON TM-U220 Rece	gs. ure. If the desired printer is not in the lis ipt stallation for all printer models.	t, please add the printer.

PSON Adva	anced Print	er Driver 4 -	InstallShiel			-
Start Cop	ying Files					1
Review	settings befo	re copying file	es.			4
Setup ha change a copying	as enough in any settings, files.	formation to s click Back. I	tart copying I If you are sat	he program files isfied with the s	s. If you want to ettings, click Ne) review or xt to begin
Current 9	Settings:					
Setup T	ype Standard					^
Printer 0	Configuration Add EPS0)N TM-U220 EPSON TM-L Create a USB	Receipt J220 Receip } port	ແບຣງ		
						~
<						>
stallShield –						
				< Back	Next >	Cancel
	un and Drint	er Driver 4	InstallChiel	< Back	Next>	Cancel
SON Adva	ance <mark>d Print</mark>	er Driver 4 -	InstallShiel	< Back	Next >	Cancel
PSON Adva Setup Sta	anced Print atus	er Driver 4 -	InstallShiel	< Back	Next >	Cancel
PSON Adva	anced Print	er Driver 4 -	InstallShiel	< Back	Next >	Cancel
SON Adva	anced Print atus	er Driver 4 -	InstallShiel	< Back	Next>	Cancel >
PSON Adva Setup Sta EPSON	anced Print atus Advanced P	er Driver 4 - trinter Driver 4	InstallShiel	< Back d Wizard g your new soft	Next >	Cancel
PSON Adva Setup Sta EPSON	anced Print atus Advanced P	er Driver 4 - trinter Driver 4	InstallShiel	< Back d Wizard g your new soft	Next >	Cancel
PSON Adva Setup Sta EPSON A	anced Print atus Advanced F	er Driver 4 - trinter Driver 4	InstallShiel	< Back d Wizard g your new soft	Next >	Cancel
PSON Adva Setup Sta EPSON	anced Print atus Advanced P	er Driver 4 - trinter Driver 4	InstallShiel	< Back d Wizard g your new soft	Next >	Cancel
PSON Adva Setup Sta EPSON A	anced Print atus Advanced F	er Driver 4 - trinter Driver 4	InstallShiel	< Back d Wizard g your new soft	Next >	Cancel
PSON Adva	anced Print atus Advanced P	er Driver 4 -	InstallShiel	< Back d Wizard g your new soft	Next >	Cancel
PSON Adva	anced Print atus Advanced P	er Driver 4 - trinter Driver 4	InstallShiel	< Back d Wizard g your new soft	Next >	Cancel
PSON Adva	anced Print atus Advanced P	er Driver 4 -	InstallShiel	< Back d Wizard g your new soft	ware installation	Cancel
PSON Adva	anced Print atus Advanced P	er Driver 4 - trinter Driver 4	InstallShiel	< Back d Wizard g your new soft	ware installation	Cancel
PSON Adva	anced Print atus Advanced P	er Driver 4 -	InstallShiel	< Back d Wizard g your new soft	ware installation	Cancel
PSON Adva	anced Print atus Advanced P	er Driver 4 -	InstallShiel	< Back d Wizard g your new soft	ware installation	Cancel
PSON Adva Setup Sta EPSON	anced Print atus Advanced P	er Driver 4 -	InstallShiel	< Back d Wizard g your new soft	ware installation	Cancel
PSON Adva Setup Sta EPSON	anced Print atus Advanced P	er Driver 4 -	InstallShiel	< Back d Wizard g your new soft	ware installation	Cancel



Una vez que ya ha terminado la instalación valla a panel de control y asegúrese de que la impresora se instaló correctamente y de que aparezca como en la siguiente imagen: > Impresoras (10)



Imprima una pagina de prueba para asegurarse de que esta funcionando.